



CINEGEARS PROFESSIONAL MOTORIZED MOTION CONTROL KIT

MANUAL BOOK

Instructions

Item List

1.2m Slider
Controller
Motion Controller Receiver
Power Cable
Remote Cables to SONY, CANON

Setup Process

1. Synchronize Controller and Motor
2. Automatic Lens Calibrating
3. Manual Re-mapping Lens Control
4. Setup A B C D Four Preset Points
5. Adjust Dampening Speed
6. Reverse Motor Spin Direction

Smart time-lapse Slider quick instruction:

CODE(C): click for 3 seconds for synchronization, you will see the screen showing "SENDING ADDRESS", within 10 seconds, click the CODE button on the motor until the indicate light turns blue.

Manual Mode Instructions

RUN DIR shows the control direction.

MAX SPEED shows the control speed.

Press (SET) button and use (↑) (↓) to select the parameter that need to be changed, click one more time to enable editing, and use (←) (→) (↑) (↓) to change the digit and value.

Hold the (SET) button for 3 seconds to quit manual editing mode and turn back to control mode.

In the manual mode, hold (←) (↓) (→) for 3 seconds to set the current position as preset point.

Once presets are set, click directional buttons to go to associated preset points.

START/PHOTO: take one photo with each single click.

Auto Mode Instructions

RESET(↑): click for 3 seconds, automatic reset.

DOWNLOAD (D): click for 3 seconds to send data to motor. Single click: turns off screen light.

START/PHOTO: Start/Stop record.